

# Fit Bike - Saddle Adjustments and Replacement

1

## Loosen the saddle locking nut

With the M13 open-end wrench provided, turn the nut beneath the saddle counterclockwise to loosen the assembly. You don't need to loosen both nuts—loosening just one side should be sufficient.



2

## Adjust or remove the saddle

Once the saddle locking nut is loosened, you can adjust the saddle position—moving it forward or backward—, incline, or remove it entirely to install a new one. If installing a new saddle, slide the old one upward to disengage it from the depth slider pin, then position the new saddle and adjust its distance as needed.

3

## Tighten the saddle locking nut

Using the provided M13 open-end wrench, turn the nut beneath the saddle clockwise to tighten the assembly. For your safety, ensure that the nuts on both sides are securely tightened before riding the bike.



**Aron Active**  
265 Bartley Drive  
Toronto, Ontario  
M4A 2N7, Canada

avironactive.com  
Phone: 877-955-4222  
General email: hello@avironactive.com  
Support email: support@avironactive.com